


Simogas
BARCELONA

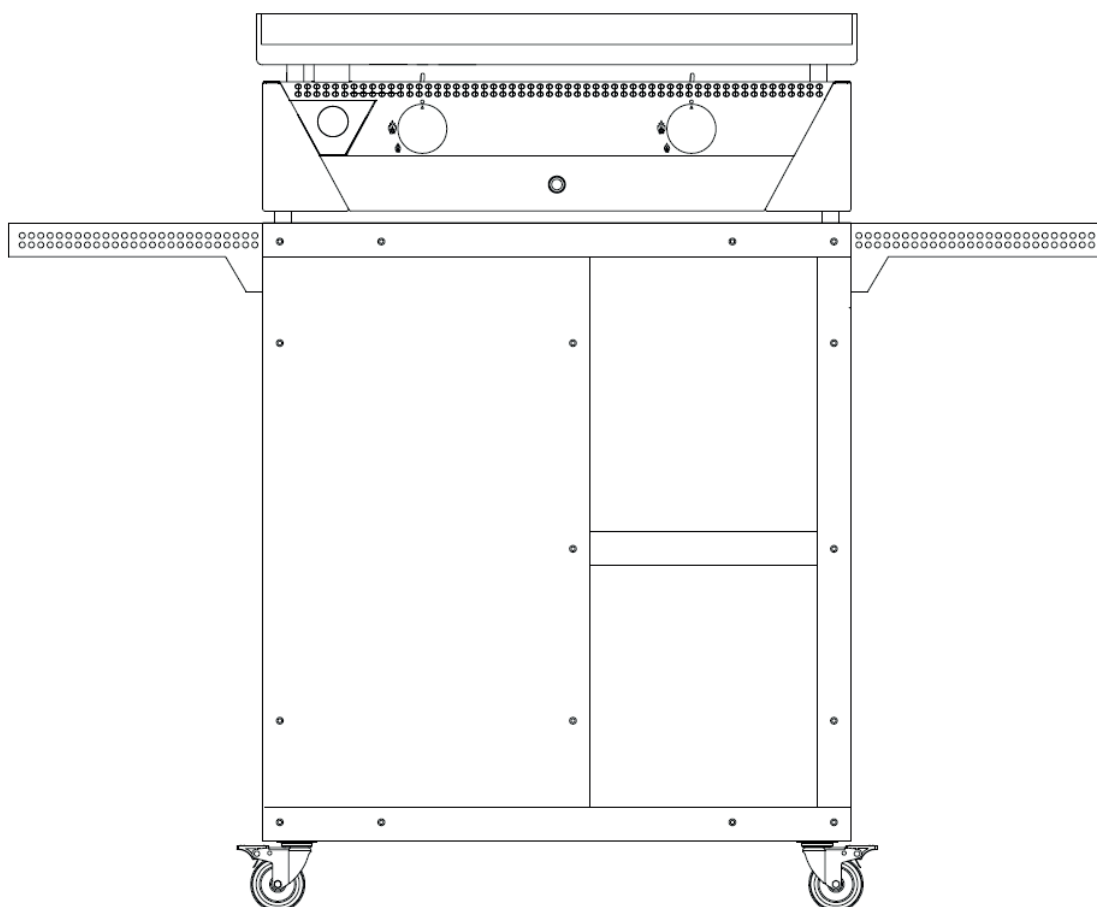


PLAN DE MONTAGE CHARIOT RAINBOW

PLANO DE MONTAJE CARRO RAINBOW


ASSEMBLY INSTRUCTIONS TROLLEY RAINBOW

AUFBAUANLEITUNG FÜR DEN RAINBOW-UNTERWAGEN

ISTRUZIONE MONTAGGIO PER CARRELLO RAINBOW

①  1 PCS	②  1 PCS	③  (M 8x10 mm) 4 PCS	
④  (M 4x6 mm) 32 PCS	⑤  (M 6x10 mm) 16 PCS	⑥  (M 8x10 mm) 16 PCS	⑦  (M 20x10 mm) 4 PCS


1

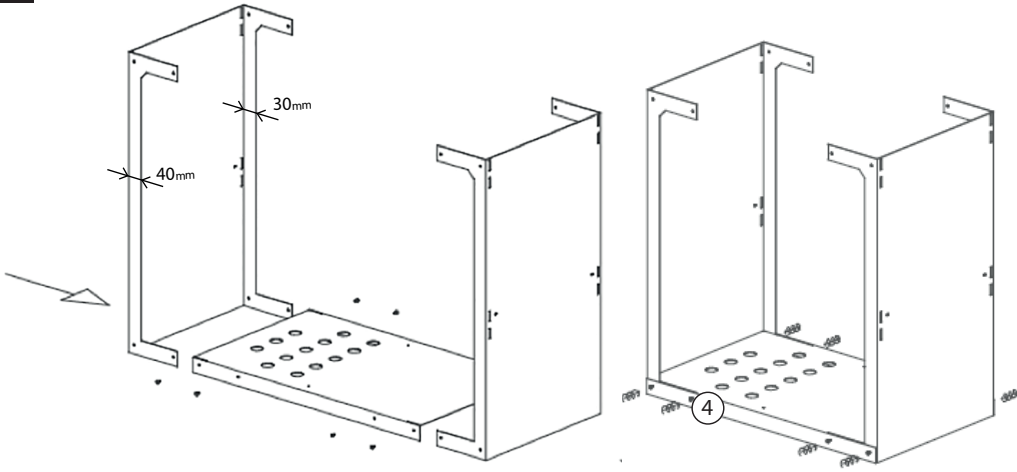

FR Matériel à utiliser
ES Material a utilizar
EN Material to use
DE Zu verwendende Teile
IT materiale da utilizzare


④ x 08 PCS
① x 01 PCS

2

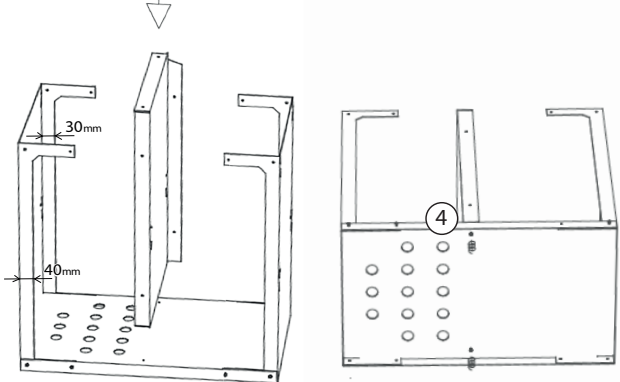


④ x 02 PCS
① x 01 PCS

3

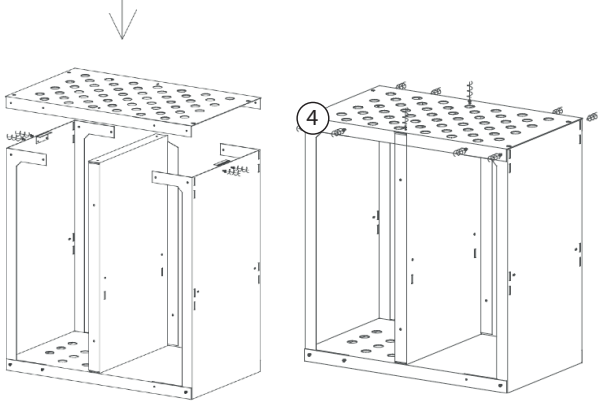


④ x 10 PCS
① x 01 PCS

4

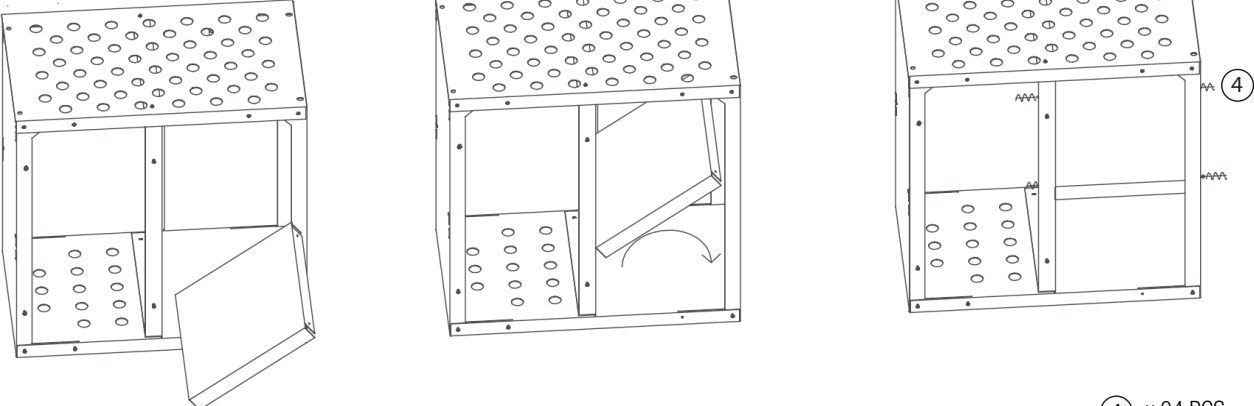

④ x 04 PCS
① x 01 PCS


5

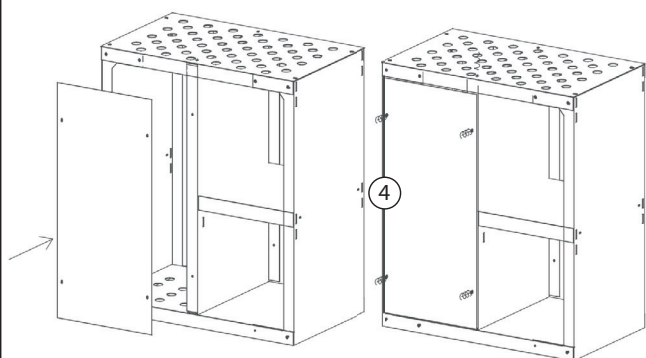


④ x 04 PCS

① x 01 PCS

6

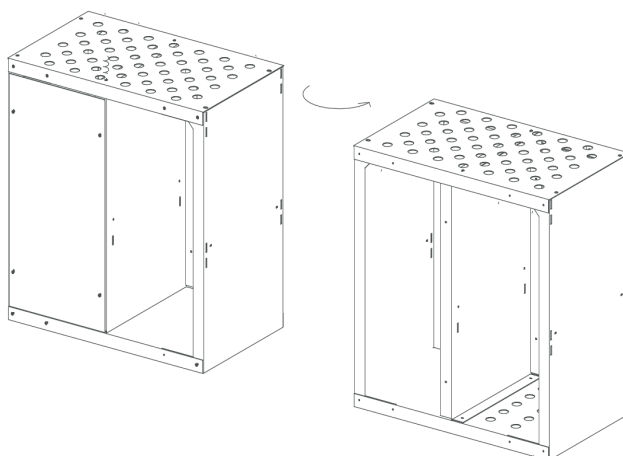


7

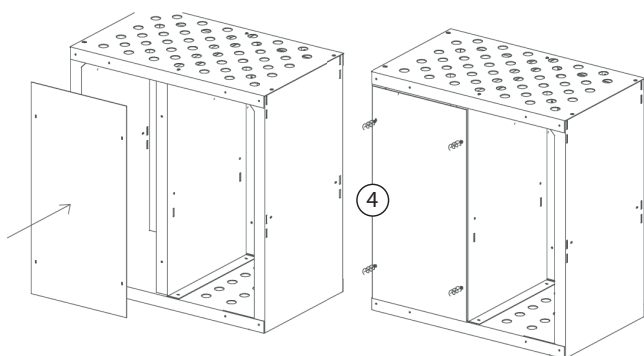


④ x 04 PCS

① x 01 PCS

8

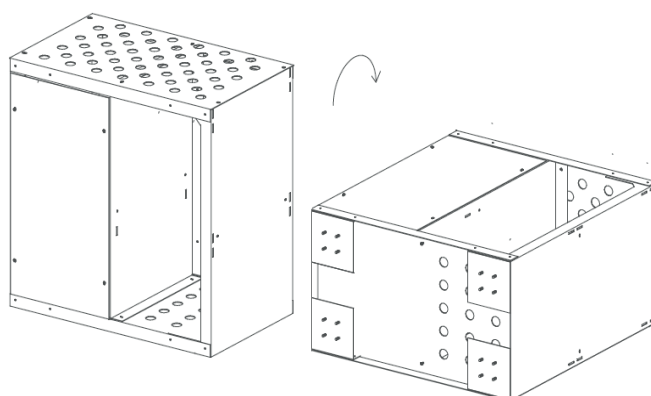

9

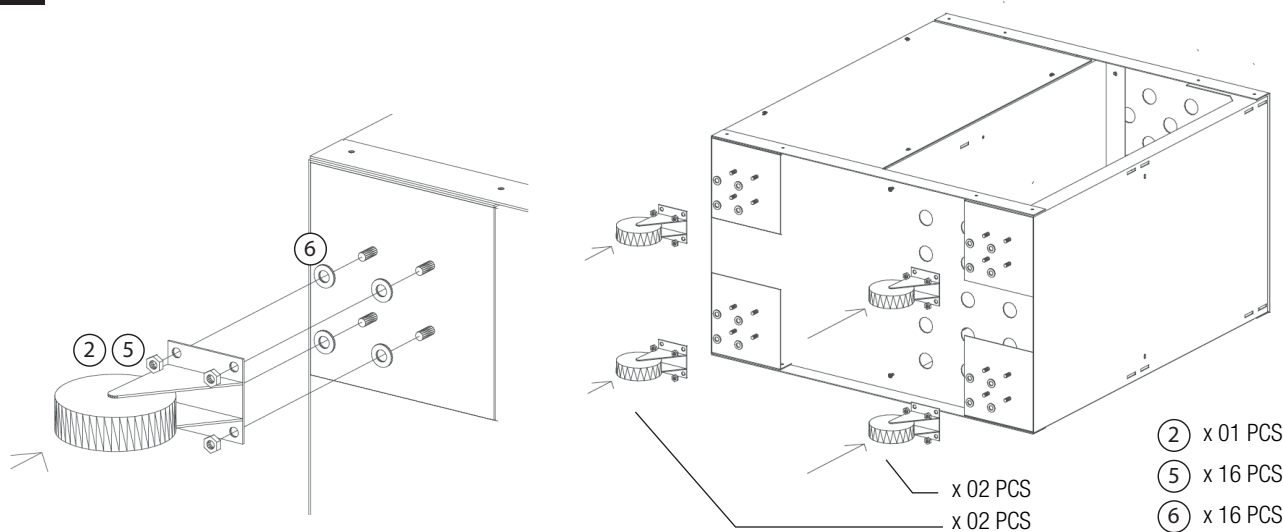

② x 01 PCS


⑤ x 16 PCS

⑥ x 16 PCS


x 02 PCS

x 02 PCS

10

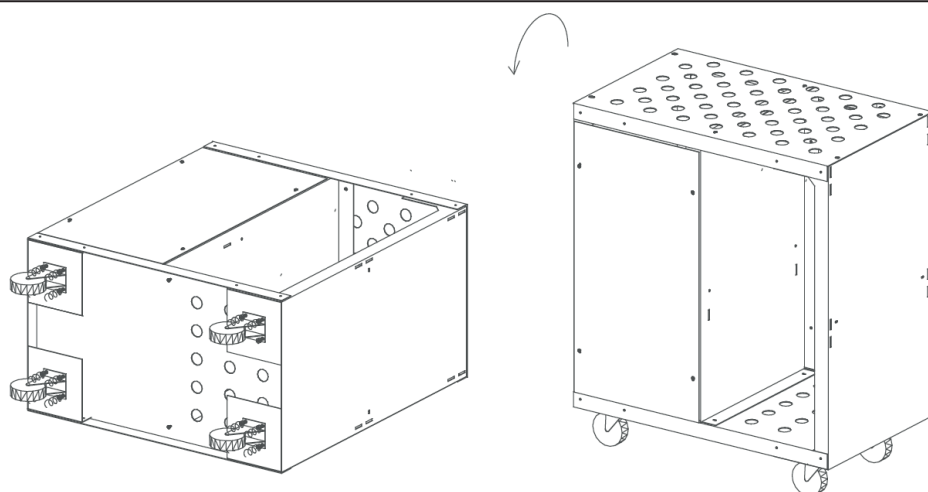

11

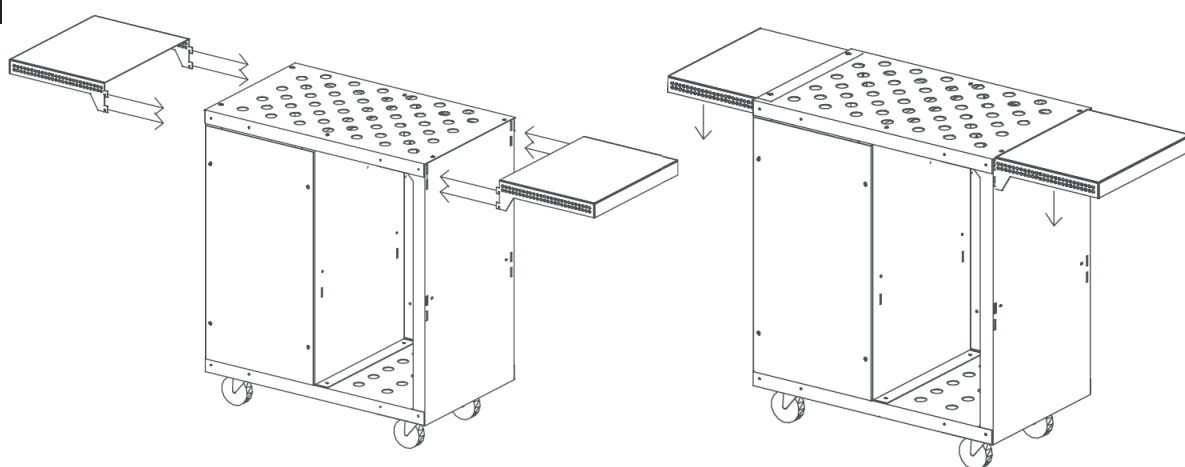

12

